




FULYA GARDROP

İLETİŞİM: 0850 888 38 00

ar de no

A 001 3,5X18 VİDA 52 AD	B 002 ALYAN VİDA 58 AD	C 003 ALYAN	D 004 ALYAN KAPAMA 26 AD	E 005 ÇİVİ 150 AD	F 006 PKM 80 TEKER 8 AD
G 007 SUPER MENTEŞE 4 AD	H RAY 2 TAKIM	I 4X30 VİDA 8 AD	O 4X50 VİDA 4 AD	J ASKI FLANŞI 4 AD	P KULP 6 AD




KURULUM ESNASINDA YARDIM ALINIZ!!!

"ACCESSORY"

alyan*8


PARÇALARI NUMARA
SIRALARINA GÖRE ŞEKİLDEKİ
GİBİ ALYAN VİDALAR İLE
BİRLEŞTİRİN...

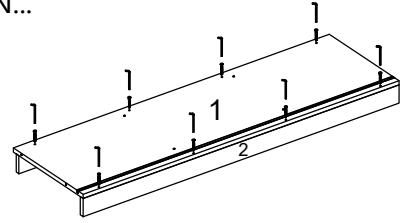

1

alyan*8


2

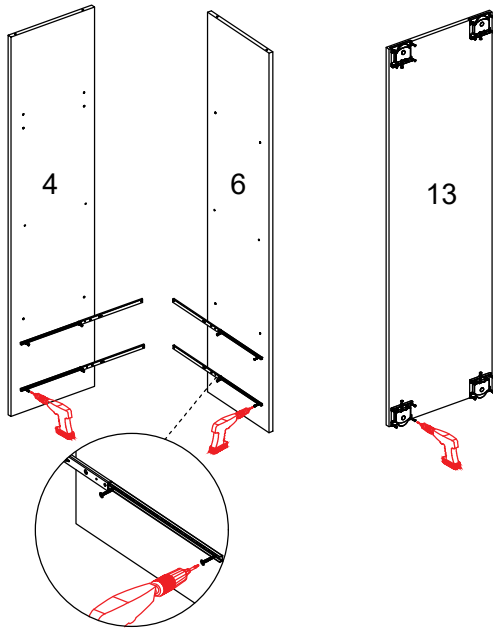

alyan*8



3


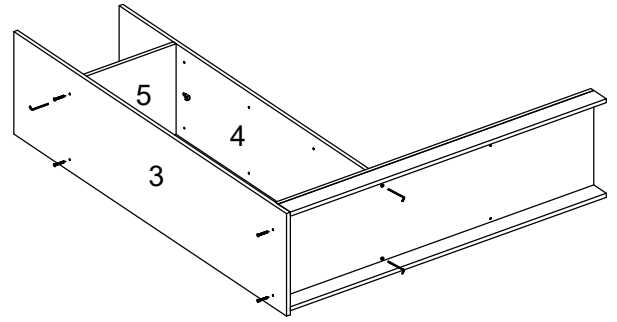


alyan*14


4

alyan*2

5

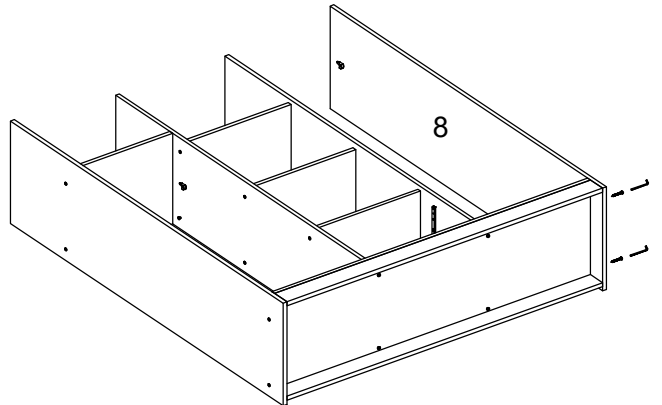
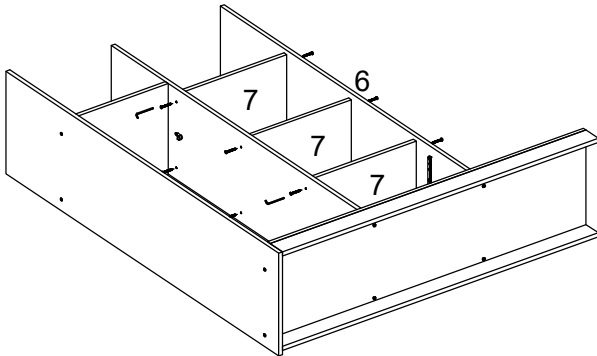


alyan*8

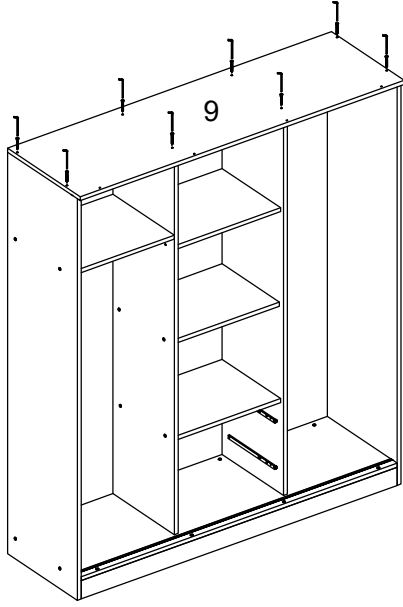


6

alyan*16
çivi*40

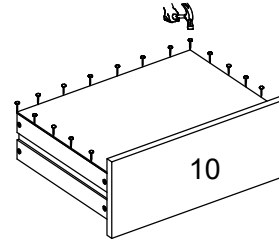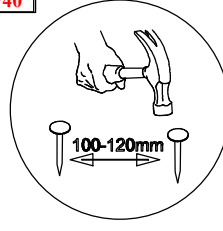

7

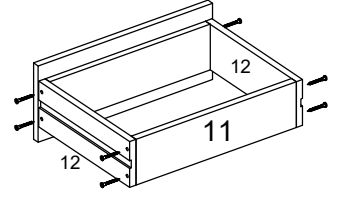



3,5x18 vida*28

8



3,5x18 vida*16
PKM 80 teker*8

SÜRGÜLÜ KAPAKLARIN İLK OLARAK ALT TEKERLERİNİ RAYA GEÇİRİN.
DAHA SONRA ŞEKİLDEKİ GİBİ TEKERLERİ ELİNİZLE ALT KONUMA
GETİREREK ÜST RAYA GEÇİRİN...

9

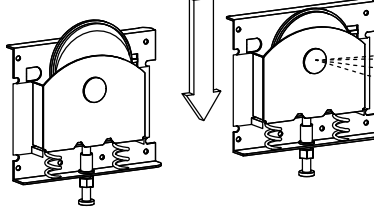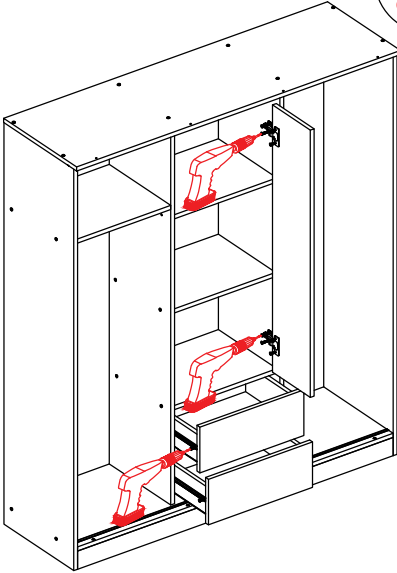


ZEMİNE GÖRE
TEKER AYARI
YAPABİLMENİZ İÇİN
TEKER AYAR
VİDASINI SIKIN
YADA GEVŞETİN...

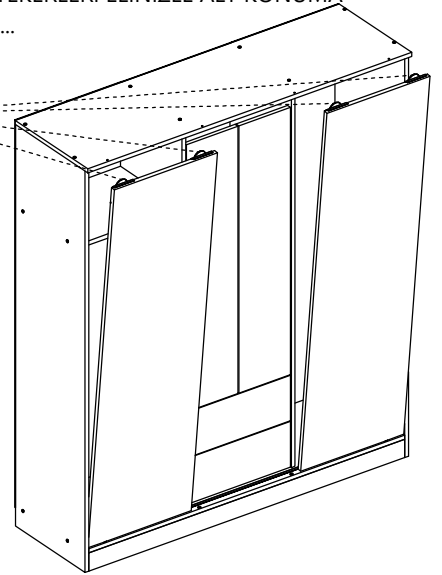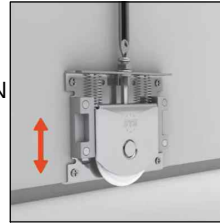


ÜST TACI TAKTIKTAN SONRA
SON OLARAK DOLAP
ARKALIKLARINI ÇİVİ İLE
SABİTLEYİN...

10

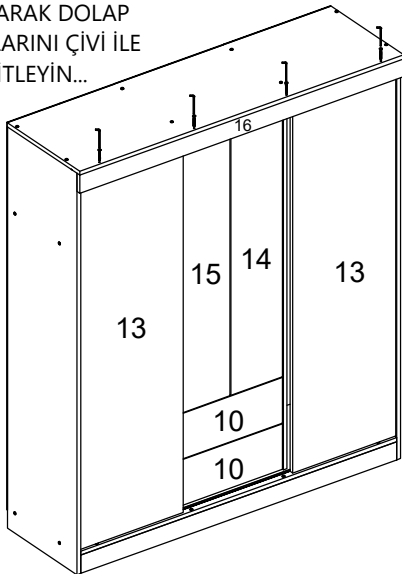

11

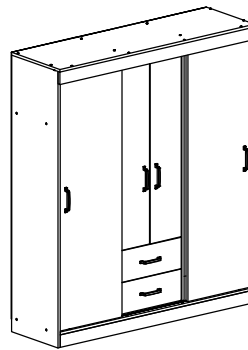

alyan*4



DETAYLI KURULUM ANİMASYONU İÇİN OKUTUN